

MSO4-01 MINI SERVER USER MANUAL

- The actual product is subject to change without prior notice. In Win Development Inc. reserves the right to make modifications.
- Please read the following steps for assembly.

Safety Information

- Place the MS04-01 server on a stable surface and avoid placing in dusty, humid, and extreme temperature areas.
- Avoid short circuit by keeping paper clips, screws and staples away from connectors, slots, sockets and circuitry.
- If the power supply is broken, please contact In Win. DO NOT attempt to service the power supply: server.support@in-win.com.tw



Warning


To avoid personal injury when unpacking the server, please use a mechanical assist unit to lift this product from the shipping pallet.

Copyright © IN WIN DEVELOPMENT INC. All Rights Reserved. Version 1.0

MSO4-01 MINI SERVER USER MANUAL


Front Panel Components

- 1 System Reset Button
- 2 Power Switch Button
- 3 Slim ODD Bay
- 4 USB Connector x 2
- 5 3.5" / 2.5" Hot Swap HDD Tray x 4

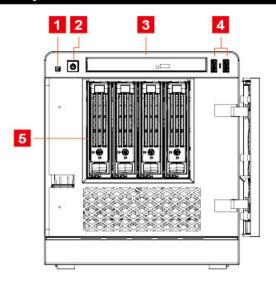

Front Panel LEDs

Item	Description	LED color	Status
1	Power LED	Blue	Active
2	FAIL LED	Red	Fail
3	ID LED	Blue	Active
4	HDD LED	Green	Active
5	LAN 1 LED	Amber	Active
6	LAN 2 LED	Amber	Active

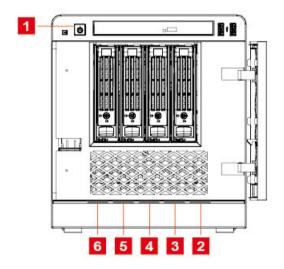

■ Inside and Rear Components


120mm Rear Fan x 1 Flex ATX Power Supply 2 Mounting Area 3 2.5" HDD Bay x 1 Front Panel Security Lock 4 5 Low Profile Slot x 1 Mini ITX M/B Mounting Area 6 7 Intrusion Switch Padlock Loop 8

Kensington Slot




Opening the Chassis Cover

1 Remove two screws on the rear panel to release the top cover from the chassis.

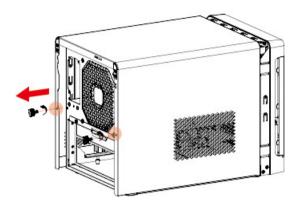


- 2 Slide the cover back.
 - Lift up the cover from the chassis.

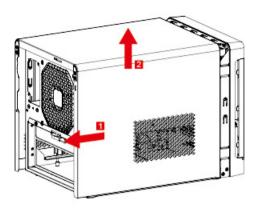


Installing Power Supply

Insert the power supply, then use five screws to secure the position.

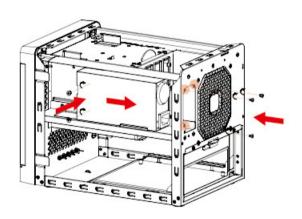


Installing Motherboard and Low Profile Expansion Card

1 Release two screws, then press the clip and pull the motherboard tray.

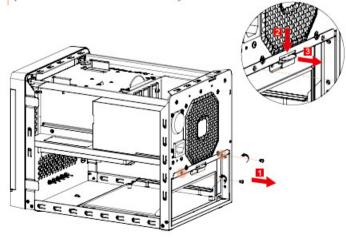

Release one screw and remove the expansion card cover.

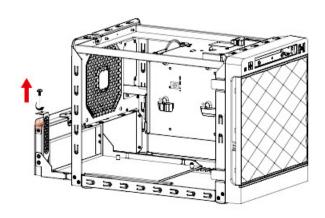





Installing Motherboard and Low Profile Expansion Card

- Install the motherboard on the motherboard tray.
 - Install the add-on card and secure with the screw.
 - * Please follow the motherboard installing guide to connect power cables and I/O wires to the motherboard.

* Motherboard cooler height maximum 65mm.

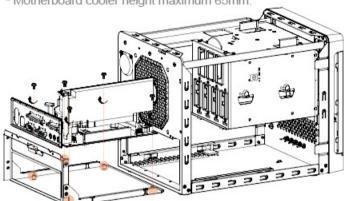

- Push back the tray.
 - Use the two screws to secure the tray.

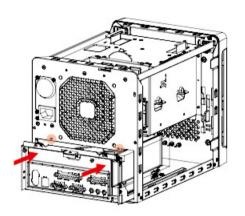



Installing Front I/O Wires


■ USB 3.0 Header

LED Connector

Switch / LED Connector

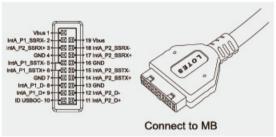

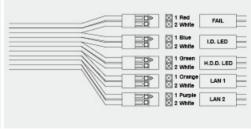

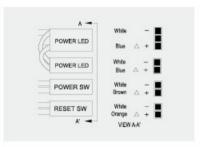


HDD Backplane Cable Connections


 Backplane Setting / Configuration Please refer to the Backplane User Manual 3RAMVI002600.



Installing 3.5" / 2.5" HDD

Release the drive tray by pushing the spring lock, then hold the tray bar and pull the drive tray outward.

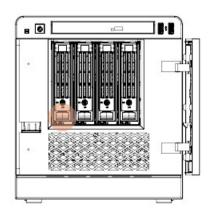


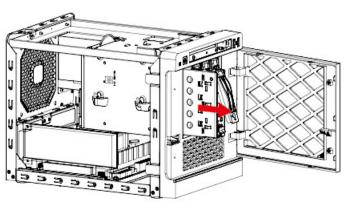




Installing 3.5" / 2.5" HDD

Place the SATA hard disk drive on the tray, and secure it with three or four screws.




2.5"




Repeat step 1-3 to install another SATA drive.

Insert the drive tray into the chassis and push the tray bar until it clicks.

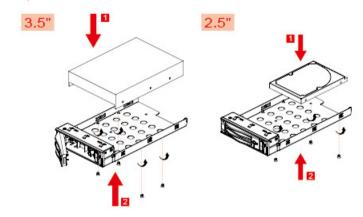

Hard Disk Drive Security Lock

The HDD bays incorporate a security screw to prevent accident HDD release. To engage the lock, turn the security screw clock-wise toward the lock symbol. To disengage the lock, turn the security screw counter clock-wise toward the unlock symbol as shown.

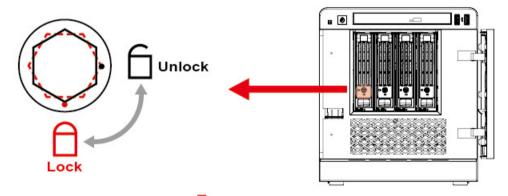



Installing 2.5" HDD

Insert the 2.5" HDD/SSD and secure into position with two screws.

Installing the Top 2.5" HDD (Optional)

- Use four screws to secure the 2.5" HDD on the bracket.
- Insert the 2.5" HDD & bracket, thenuse one screw to secure the position.
 - * If the slim ODD is installed, the top 2.5" HDD option cannot be installed.

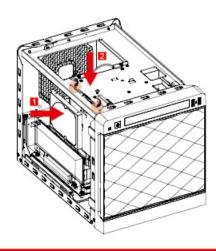

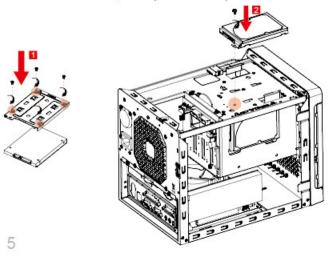


MS04-01 MINI SERVER USER MANUAL


Installing Slim ODD

1 Disassemble the ODD panel.

- 2
- Use two screws to secure the L bracket to the slim ODD.
- Insert the slim ODD.
- Use the screw to secure the position.

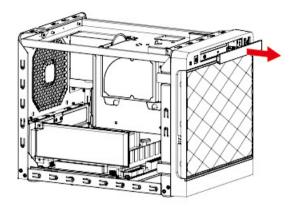




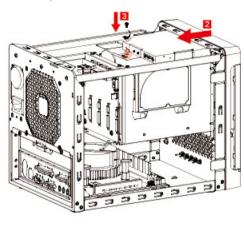

Installing the Chassis Cover

- Lower the cover onto the chassis.
- Slide the cover into the chassis.
- Use two screws to secure the cover.

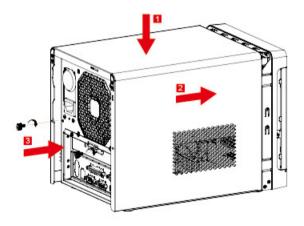

Completing Installation

Installation steps is now complete.

